

Brake and Accelerator Hand Control

MERO 2




Way of Controlling Brake and Accelerator

Brake is always controlled by **pushing to the dashboard** because this movement is natural for braking. Accelerator is normally controlled by pulling the lever from the zero position down. Hand pressure downwards is **very comfortable**. When accelerating by pulling the lever down we can **control the brake pedal independently**. In case of automatic clutch this solution enables smooth start up the hill.

Advantages of MERO 2 System

- Absolut **reliability**.
- Possibility of variation the lever which can be **on the left or right side**.
- The system can be used as a separate control of the brake or clutch.
- The lever standardly contains **brake lock** (not needed when lever on the left) and **accelerator lock**.
- Possibility of a larger brake lock button for quadriplegics.
- More types of grips and colour leather variations.
- We supply the device with a universal bracket for all cars.
- We are able to adapt your specific requirements or the specifics of your market.

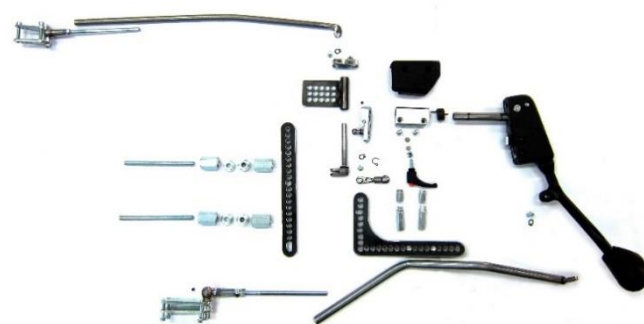

www.hurt-auto.cz

HURT s. r. o. - Car Adaptations for Handicapped
Bambousek 664
281 26 Týnec nad Labem
CZECH REPUBLIC
Tel.: +420 608 977 274
Email: info@hurt-auto.cz